



TxIsoPack

TEMPERATURE TRANSMITTER – OPERATING MANUAL V1.1x A

INTRODUCTION

The TxIsoPack is an 4-20 mA 2-wire isolated temperature transmitter, for head assembly. Powered by the current *loop*, its configuration is accomplished by connecting the transmitter directly to the PC USB interface, **not requiring installation of additional drivers**.

The output current is linearized and adjusted in function of the input sensor type and range configured.

SPECIFICATIONS

Sensor input: Configurable.

Thermocouples: Types J, K, R, S, T, N, E and B, According to IEC 60584 (ITS-90) Impedance $\gg 1 \text{ M}\Omega$

Pt100: Types: 2, 3 and 4 wires, Excitation 0.17 mA, $\alpha = 0.00385$, According to IEC60751 (ITS-90).

Voltage: 0 to 50 mVdc. Impedance $\gg 1 \text{ M}\Omega$

Sensor Type	Range	Minimum Measurement Range
Thermocouple K	-150 to 1370 °C	100 °C
Thermocouple J	-100 to 760 °C	100 °C
Thermocouple R	-50 to 1760 °C	400 °C
Thermocouple S	-50 to 1760 °C	400 °C
Thermocouple T	-160 to 400 °C	100 °C
Thermocouple N	-270 to 1300 °C	100 °C
Thermocouple E	-90 to 720 °C	100 °C
Thermocouple B	500 to 1820 °C	400 °C
Pt100	-200 to 650 °C	40 °C
Voltage	0 to 50 mV	5 mV

Table 1 – Sensors maximum measurement ranges

Total accuracy: Maximum error 0.3 % of the maximum range for thermocouples, 0.2 % for Pt100 and voltage;

Response time: $\leq 500 \text{ ms}$

Isolation: 1000 Vac for 1 minute between input and output.

Output: 4-20 mA or 20-4 mA current, 2-wired; linear in relation to the temperature measurement by the selected sensor.

Resolution: 0.004 mA (12 bits).

Power supply: 12 to 35 Vdc, voltage across the transmitter;

Maximum load (RL): $RL = (V_{DC} - 12) / 0.02 \Omega$

Were: V_{DC} = Power supply voltage

Operating temperature: -20 to 75 °C

Humidity: 0 to 90 % RH

Electromagnetic compatibility: EN 50081-2, EN 50082-2

Internal protection against the supply voltage polarity inversion.

Cold junction compensation for thermocouples.

ABS box, diameter de 44 mm and max. height 24 mm.

5-pin USB mini-B 5 connection cable.

CONFIGURATION

When the transmitter is already configured with the sensor and desired ranges, no intervention is necessary and its installation may be executed immediately. When it is necessary to change the configuration, it should be made through the TxConfig software.

USB cable and TxConfig software make up the Transmitter Setup Kit that can be purchased from the manufacturer or any authorized representative. The setup software may be updated at no charge at the manufacturer's website. To install, execute the file **Tx_setup.exe** and follow the instructions.

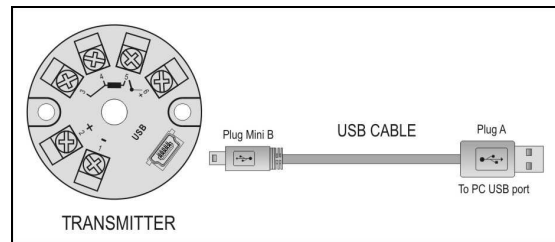


Figure 1 – USB cable connections

During the setup, the transmitter is powered by the USB, not requiring an external power supply.

The transmitter setup can also be made by connecting it to the *loop*, using the loop power supply. There is no electrical insulation between the transmitter and the communication port (interface), therefore it is not recommended to configure it with the sensor inlet connected to the process. See **Figure 2**.

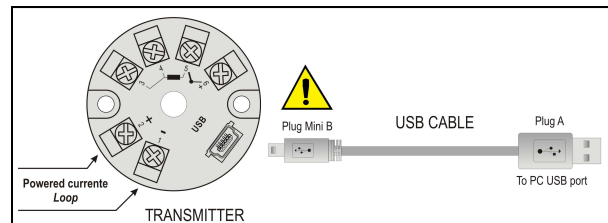


Figure 2 – USB cable connections – Loop powered

After these connections, the user must run the TxConfig software and, if necessary, consult the *Help* topic to help using the software.



The USB communication port (interface) of the TxIsoPack is not electrically insulated from the transmitter's input.

The TxConfig screen is shown in **Figure 3**.

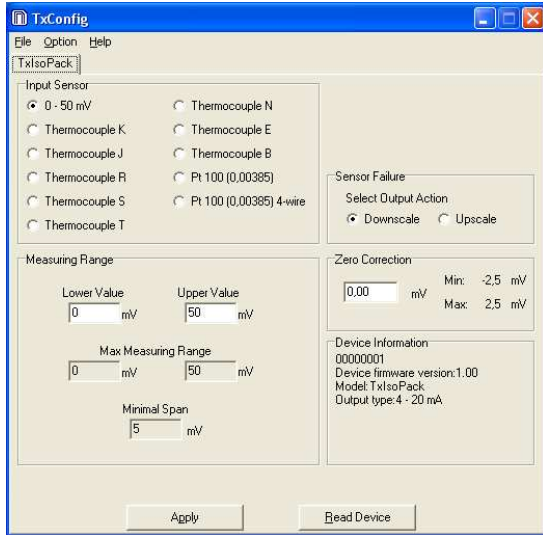


Figure 3 – TxConfig main screen

The fields in the screen mean:

- 1. Input Sensor:** Select the sensor to be used. See **Table 1**.
 - 2. Measuring Range:** Define the transmitter measurement range.
 - Range **Lower Limit:** temperature desired for a 4 mA current.
 - Range **Upper Limit:** temperature desired for a 20 mA current.
 - When the Lower Limit is set with a value greater than the Upper Limit value of the output current operates from 20 to 4 mA (the current decreases as the temperature increases).**

Note: The values chosen can not exceed the **Sensor Range** shown in this same field, and also may not establish a range with width (span) smaller than the **Min. Range** indicated later in this same field. See **Table 1** of this guideline.
 - 3. Sensor Failure:** It establishes the output behavior, when the transmitter indicates a failure:
 - Minimum:** output current goes to 3.8 mA (down-scale), typically used for refrigeration.
 - Maximum:** output current goes to 20.5 mA (up-scale), typically used for heating.
 - 4. Device Information:** This field contains the data identifying the transmitter. This information must be submitted to the manufacturer for any queries.
 - 5. Zero Correction:** It corrects small deviations presented in the transmitter outlet, for example, when the sensor is replaced.
 - 6. Send Configuration:** It applies the new setup. Once sent, the setup will be immediately adopted by the transmitter.
 - 7. Read Configuration:** Reads the current setup in the transmitter connected. The screen now presents the current setup that may be changed by the user.
- Note:** The factory default configuration is:
- Sensor Pt100, range 0 to 100 °C, 0 °C of zero correction.
 - Output at maximum for the sensor failures.

Upon purchase order, the user can define a specific setup.

MECHANICAL INSTALLATION

The TxIsoPack transmitter is suitable to be installed in heads with protection degree IP54 or higher. Vibrations, moisture and extreme temperatures, electro-magnetic interference, high voltage and other interferences can permanently damage the unit, and could cause error in the measured value.

DIMENSIONS:

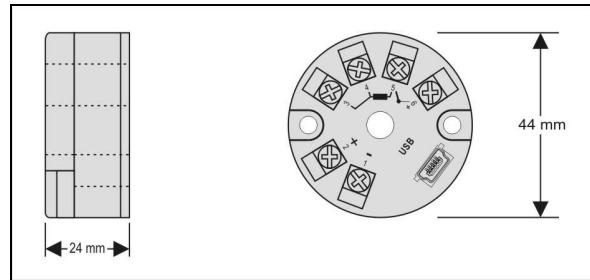


Figure 4 – Transmitter dimensions

ELECTRICAL INSTALLATION

Polyamide enclosure.

Section of the cable used: 0.14 to 1.5 mm².

Recommended torque in the terminal: 0.8 Nm.

RECOMMENDATIONS FOR INSTALLATION

- Sensor signals conductors must go through the plant system separate from power leads (loop), if possible in grounded conduits.
- The instruments must be powered from the instrumentation power supply circuit.
- In control and monitoring applications is essential to consider what can happen when any part of the system fails.
- It is recommended the use of suppressors in contact coils, solenoids and any inductive load.
- Use compensation cables in the connections using thermocouples.

ELECTRICAL CONNECTIONS

The figures below show the electrical connections required. The terminals 3, 4, 5 and 6 are dedicated to the sensor connection. **LOAD** represents the 4-20 mA current measuring device (indicator, controller, recorder, etc.)

PT100 2-WIRES

Note: When the Pt100 2-wires the terminals 3 and 4 must be interconnected, according to the figure below.

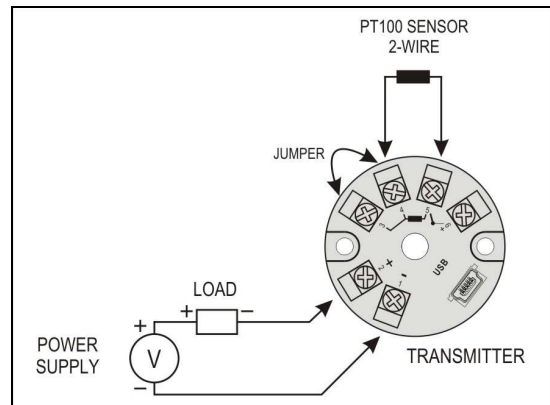


Figure 5 – Transmitter electrical connections (Pt100 2-wires)

PT100 3-WIRES

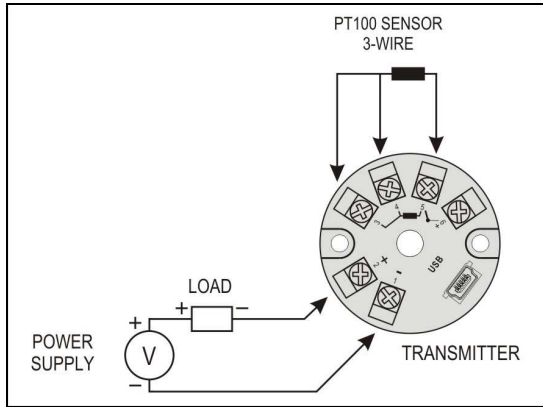


Figure 5 – Transmitter electrical connections (Pt100 3-wires)

PT100 4-WIRES

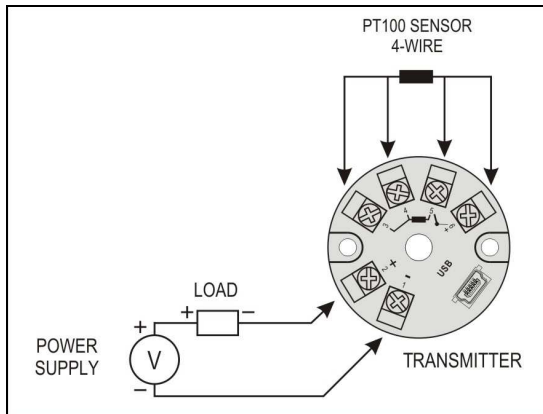


Figure 6 – Transmitter electrical connections (Pt100 4-wires)

THERMOCOUPLES

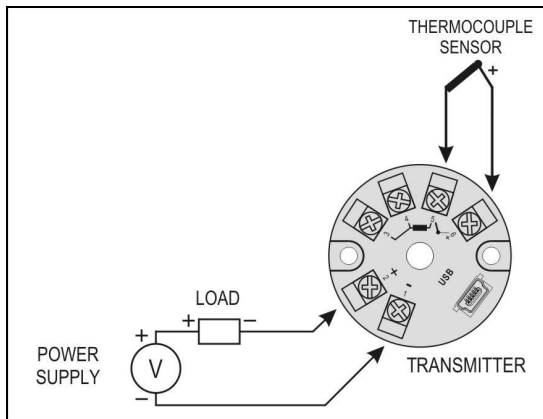


Figure 7 – Transmitter electrical connections (Thermocouple)

VOLTAGE (0-50 mV)

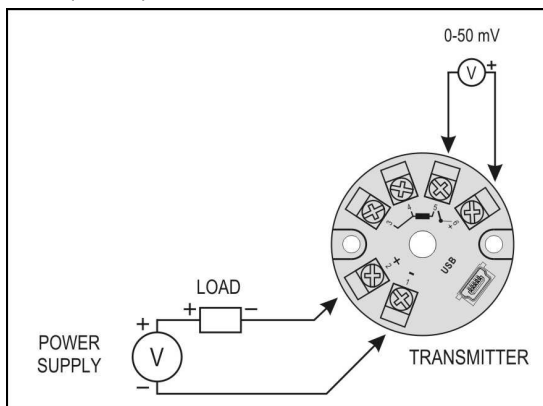


Figure 8 – Transmitter electrical connections (0-50 mV)

OPERATION

The transmitter is perfectly factory-calibrated with standardized sensors, not requiring any adjustment by the user.

The sensor offset can be also changed through the TxConfig software. The USB connection can be made even with the transmitter connected to the process and operating without causing errors in the measurement. See item *Zero Correction* in the chapter **CONFIGURATION** of this guideline.

The user must choose the most suitable sensor and range to the process. The chosen range must not exceed the maximum range of measurement defined for the sensor and should not be smaller than the minimum range for the same sensor.

It is important to note that the accuracy of the transmitter is always based on the maximum range of the sensor used, even when a mid-range was set. Example:

- The sensor Pt100 has a max. range of -200 to $+650$ °C and total accuracy of 0.2 %, thus we can have an absolute error up to 1.7 °C (0.2 % of 850 °C).
- The absolute error is the same for a wide range as the maximum (-200 to 650 °C), to a narrower band User-defined. (For example: 0 to 100 °C.)

Note: When measurements are made at the transmitter, see if the Pt100 excitation current required by the calibrator is compatible with the Pt100 excitation current used in the transmitter: 0.17 mA.

WARRANTY

The manufacturer will grant to the owner of his equipment, duly identified through the purchase invoice, a twelve-month warranty under the following terms:

- The warranty period will begin at the issue date of the invoice.
- Within the warranty period, all costs regarding labor and components used for repair of defects occurred under normal use conditions, will be free of charge.
- For any necessary repair, send the module, together with the shipping invoices for repair purpose, to our factory's address. Expenses and risks for sending and returning shall be borne by the purchaser.
- Any repair of defects caused by mechanical impact or exposure of the equipment to improper temperature and humidity conditions will be charged even during the warranty period.